

dedicated KVM switch and rackmount screen technology



Contents

< Part 1 > Combo Cat6 **IP** 2-console KVM

	Cat5-IP08 /-IP16 /-IP32	
1.1	Package contents	P.1
1.2	KVM port & Cat6 dongle connection	P.2
1.3	IP & Local console connection	P.3
1.4	IP console setting	P.4
1.5	KVM Cascade	P.5
1.6	IP Multi-port connection to remote PDU	P.6 - 7
1.7	Specifications	P.8

< Part 2 > Combo Cat6 2-console KVM

	Cat5-08R / -16R / -32R	
2.1	Package contents	P.9
2.2	KVM port & Cat6 dongle connection	P.10 - 11
2.3	Remote & Local console connection	P.12 - 13
2.4	KVM Cascade	P.14
2.5	Specifications	P.15

< Part 3 > Combo Cat6 KVM

	Cat5-08 / -16 / -32	
3.1	Package contents	P.16
3.2	KVM port & Cat6 dongle connection	P.17
3.3	KVM Cascade	P.18
3.4	Specifications	P.19
	-	

< Part 4 > Usage

4.1	KVM Button	P.20
4.2	Password	P.21
4.3	KVM OSD	P.22
4.4	KVM Hotkey & Remote Console Hotkey	P.23
4.5	DC power 12V, 24V, 48V Input	P.24

Part 2. Combo Cat6 2-console KVM < 2.1 > Package Content



Combo Cat6 2-console KVM







Cat5 Dongle USB/DVI

- To connect DVI-D connector to the computer's video card
- To connect USB connector to the computer's USB port



Cat5 Dongle USB

- To connect DB-15 connector to the computer's video card
- To connect USB connector to the computer's USB port



Cat5 Dongle PS/2

- To connect DB-15 connector to the computer's video card
- To connect PS/2 keyboard connector to the computer's keyboard port
- To connect PS/2 mouse connector to the computer's mouse port

< 2.3 > Remote & Local console connection





The receiver provides a hotkey function for remote console. Please refer to P.23



< 2.4 > KVM Cascade

- Cascade up to 8 levels, 256 servers
- Cascading multiple KVM with CBC-6 cascade cable.

Cascaded KVMs from level 2 to 8 must be the models of Cat5-08 / -16 / -32

When multiple combo Cat6 KVMs cascade together, the master KVM at level 1 will take all control of other slave KVM switches (e.g. level 2 to 8).





Cascade Cat5/USB

6ft Combo KVM cascade cable

< 2.5 > Specifications

	-	08R -16R -32R		
	KVM Port			
	Number of ports:	8, 16 or 32		
	Connector:	RJ-45		
	Connectivity:	DVI-D / VGA connector dongle up to 40 meters (132 feet) via		
		Cat6 / Cat5 cable		
	Local Console			
	Graphic connector:	1 x DB-15 VGA		
	Resolution:	Up to 1600 x 1200		
	Input device:	2 x USB type A for keyboard & mouse		
	Remote Console			
	Connector:	1 x DB 15-pin, VGA		
	Resolution:	Up to 1600 x 1200 (500 feet), Up to 1024 x 768 (1000 feet)		
	Input device:	2 x USB type A for keyboard & mouse		
	Remote I/O:	RJ45 via Cat5 / Cat5e / Cat6 cable up to 500 feet		
	Compensation:	Auto adjust for cable length		
	Expansion:	Up to 256 servers by 8-level cascade		
	Compatibility			
	Multi-platform:	Mix PCs, SUNs, IBMs, HPs, DELLs Server		
	Support:	Windows Vista / 2003 / XP / 2000, Linux, Netware, Unix, DOS		
	Power			
	Input:	100 or 240V AC at 50 or 60 Hz via IEC type cord OR		
		AC / DC power adapter 12V@3.3A (optional)		
	Option DC:	12V / 24V / 48V DC input		
	Consumption:	Max. 48 Watt, Standby 5 Watt		
	Regulatory Approval:	FCC, CE		
	Environmental			
	Operating:	0 to 50°C		
	Storage:	-5 to 60°C		
	Relative humidity:	90%, non-condensing		
	Shock:	50G peak acceleration (11ms, half-sine wave)		
	Vibration:	58~100Hz / 0.98G (11ms / cycle)		
	Product Information			
	Dimension (W x D x H):	443 x 180 x 43.6 mm / 17.4 x 7.1 x 1.72 inch		
	Net weight:	3 kg / 6.5 lb		
	Packing Information			
	Dimension (W x D x H):	500 x 400 x 90 mm / 19.7 x 15.7 x 3.5 inch		
	Gross weight:	5 kg / 11 lb		

4.1 KVM Button

Power ON

- Turn off all servers and KVM switches
- Make sure all cables / connectors are properly connected
- Recommend Power ON sequence is monitor, KVM switch finally computer



4.2 Password

The password is enabled by default, the default password is "00000000" eight zeros (**Do not use "0" on number pad**)

Enable password

- 1. Press the KVM hotkey Scroll Lock + Scroll Lock + U
- 2. Logout the KVM by pressing the hotkey Scroll Lock + Scroll Lock + P
- 3. In SUPERVISOR level, enter "00000000" eight zeros in user name & password field (Do not use "0" on number pad)
- In USER level, press Space bar + Enter in user name & password field Remark: Automatic logout after 10 minutes of inactivity

Set your own user name & password

- 1. Login the KVM in SUPERVISOR level by pressing "00000000" eight zeros in user name & password field
- 2. Call KVM OSD menu by pressing the KVM hotkey **Scroll Lock + Scroll Lock + Space Bar**
- 3. Press **F1** to the MAIN MENU
- 4. Select "USER SECURITY"
- 5. Set password in SUPERVISOR & USER level
 - a. In the left-top row "S" (SUPERVISOR), press Enter to set your own user name & password
 - b. In the row 1 to 8 (USER), press Enter to set your own user name & password
- 6. Press Enter to save the setting or press Esc to cancel the editing without any change
 - Remark: a. Blank has underscore, while SPACE doesn't have
 - b. Press any alphanumeric key to move to next input item. SPACE is treated as a valid character

■ Change your password

- 1. Login the KVM in SUPERVISOR level by pressing your own user name & password
- 2. Call KVM OSD menu by pressing the KVM hotkey Scroll Lock + Scroll Lock + Space Bar
- 3. Press F1 to the MAIN MENU
- 4. Select "USER SECURITY"
- 5. Change password in SUPERVISOR & USER level
 - a. In the left-top row "S" (SUPERVISOR), press Enter to change your user name & password
 - b. In the row 1 to 8 (USER), press Enter to change your user name & password
- 6. Press Enter to save the setting or press Esc to cancel the editing without any change

Remark: a. Blank has underscore, while SPACE doesn't have

b. Press any alphanumeric key to move to next input item. SPACE is treated as a valid character

Disable your password

- 1. Press the KVM hotkey Scroll Lock + Scroll Lock + U
- 2. Logout the KVM by pressing the KVM hotkey Scroll Lock + Scroll Lock + P
- 3. You don't need user name & password to access the KVM OSD menu

Forget your password

Please contact your supplier for further support

Remark:

- You must press the KVM hotkey within 2 seconds
- A beep sound will be heard for successful entering KVM hotkey

4.3 KVM OSD

OSD Menu	PORT NAME
	BANK:1 F1:MENU 01☆ SYSTEM 01 02☆ SYSTEM 02 03☆ SYSTEM 03 04☆ SYSTEM 04 05☆ SYSTEM 05 1/+ SELECT 06☆ SYSTEM 06 07☆ SYSTEM 07 BANK SELECT 06
OSD operation	USER : SUPERVISOR SCAN TIME : 10 SEC FW1V3
next to the system name	The PC is powered on
next to the system name	The PC is selected
F1	Access F1 MAIN MENU
F2	Logout the OSD menu
F3	Previous menu
Esc	Cancel / Quit
Enter	Complete / Switch to selected port
↑/ ↓	Switch to previous or next port
PgUp/PgDn	Switch to previous bank or next bank
1/2/3/4	Display port 01 ~ 08 / 09 ~ 16 / 17 ~ 24 / 25 ~ 32 Remark: Display port 17 ~ 32 for 32 port model only

F1 Main Menu	MAIN MENU 🖘 X
	SELECT OPTION :
	01 LANGUAGE
	04 USER SECURITY
	05 ACCESS LIST
	06 HOTKEY
	07 TIME SETTINGS
	08 OSD MOUSE
01 LANGUAGE	OSD language change
02 PORT NAME EDIT	Define port name
03 PORT SEARCH	Quick searching by port name
04 USER SECURITY	Change password
05 ACCESS LIST	Define user access authority
06 HOTKEY	Change hotkey
07 TIME SETTINGS	Modify scan display time interval
08 OSD MOUSE	Modify OSD mouse speed

4.4 KVM Hotkey & Remote Console Hotkey Combo Cat6 KVM Usage

Local Console Hotkey	Function
Scroll Lock + Scroll Lock + Space Bar	Calling OSD menu
Right-button mouse + Esc	Calling OSD menu
Scroll Lock + Scroll Lock +	Switch to previous port
Scroll Lock + Scroll Lock +	Switch to next port
Scroll Lock + Scroll Lock + PgUp / PgDn	Switch to previous bank or next bank
Scroll Lock + Scroll Lock + Bank no. + Port no.	Switch to specific port
Scroll Lock + Scroll Lock + B	Turn the buzzer ON and OFF * Default the buzzer is ON
Scroll Lock + Scroll Lock + P	Logout the KVM if password security is ON. Show up the status windows

Advance hotkeys (for Supervisor login only)

Scroll Lock + Scroll Lock + S	Activate auto-scan mode for connected servers *Press any key to exit the auto-scan mode
Scroll Lock + Scroll Lock + R	Reset all the KVM settings to factory default *Except User Security settings
Scroll Lock + Scroll Lock + U	Disable and enable password security *Default security is ON
Scroll Lock + Scroll Lock + L	To enable / disable the screen saving function and 10 minutes auto-logout *Default the screen saving is OFF

Remarks:

- Example of "Scroll Lock + Scroll Lock + Bank no. + Port no."
 - Bank No.: 1 to 8
 - Port No. : 01 to 32
 - e.g. Bank 1 Port 4 : Scroll Lock + Scroll Lock + 1 + 0 + 4
 - e.g. Bank 2 Port 16 : Scroll Lock + Scroll Lock + 2 + 1 + 6
- You must press the hotkey within 2 seconds
- A beep sound will be heard for successful entering
- The numeric keypad is not supported, while in OSD screen, the arrow keys, PgUp, PgDn, and Enter keys are supports

Remote Console Hotkey	Function
Scroll Lock + Scroll Lock + C	Toggle switch between remote & local port
Scroll Lock + Scroll Lock + Q	Turn the buzzer ON & OFF *Default the buzzer is ON
Scroll Lock + Scroll Lock + S	Activate auto-scan mode for remote & local port *The scan time interval is 5 seconds
Scroll Lock + Scroll Lock + A	Auto-adjust the video signal

4.5 DC Power 12V, 24V, 48V Input

	+ ○⊕⊕]o		
Model	12V	24V	48V
Input rating			
Input voltage:	12-Volt	24-Volt	48-Volt
Input range:	9 ~ 18V	18 ~ 36V	36 ~ 75V
Input current			
- No load	50 mA	50 mA	50 mA
- Full load	4950 mA	2450 mA	1220 mA
Output rating			
Output voltage:	12-Volt	12-Volt	12-Volt
Output current:	4.16A	4.16A	4.16A
Efficiency	84%	85%	85%

Remarks:

Package does not include power cord

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.