

# Triple Screen LCD Console Drawer Dual Utlf g'Rail

ÜT ËÝFÏ ÖŒ¢H



This manual covers various aspects of the equipment such as installation and setup, which will help you make full use of this LCD Drawer. Please read this manual carefully, install and operate the equipment according to the manual to avoid damage.

Product package includes following items:

- 1 \* Triple screen LCD drawer;
- 1 \* AC Power Cord
- 1 \* Rack installation bracket (one pair)
- 1 \* USER'S manual (CD)
- 3 \* 1.8 Meter VGA cable
- 3 \* 1.8 Meter DVI cable
- 1 \* 1.8 Meter USB A Type cable
- 1 \* 1.8 Meter Audio cable

Please check items above. If any item is missing or damaged, please contact your dealer promptly.

## **Table of Contents**

1	Introduction	
	1.1Overview	4-
	1.2 Functions & Features	
	1.3 Hardware Requirement	4-
	1.3.1 Host Requirement	4-
	1.3.2 Cables	4-
	1.4 Product Specifications	5-
	1.5 LCD Specifications	
	1.6 Front View	
	1.7 Rear View	7-
2	Installation	8-
	2.1 Rack Installation	8-
	2.2 Operation	9-
	2.3 Standard Installation	10
	2.4 LCD OSD Menu Setup	11-
3	Certificates	12-

### 1 Introduction

#### 1.1 Overview

RM-X17DAx3 LCD integrates 1 keyboard, 3 x LCD displays and touch pad in a drawer type work table and provides a convenient space-saving operation. Dual rail design allows the LCD screen and keyboard tray to operate independently.

With a graphic card, screen can be cloned or extended to each screen; or can display independently. With screen extended function, people can be multi-tasking in different screens. When operating, mouse can simply scroll across each screen boundary.

#### 1.2 Function & Features

The RM-X17DAx3 is 2U height, supported resolution up to 1920 x 1200, 75Hz. It can be installed into 19 inch rack cabinet. No need to install additional software or hardware.

#### 1.3 Hardware Requirement

#### 1.3.1 Hosts Requirement:

(1) DVI, VGA graphic card


Note: the max. resolution of the integrated LCD display is 1920x1200. Make sure the resolution of any connected computer does note exceed this resolution.

- (2) USB port for keyboard and mouse.
- (3) USB 2.0 Hub for peripheral USB devices
- 1.3.2 Cables
  - (1) 3x DB-15 VGA cable male to male
  - (2) 1x USB A Type Cable
  - (3) 3x DVI-D Cable male to male
  - (4) 1x Audio Cable

## 1.4 Product Specifications


Model		RM-X17DAx3
Brightness		300cd/m2
Contrast		650:1
Angle of visibility	у	140°(H),120°(V)
Color display		262K
Video resolution		native 1920 x 1080 (supports up to 1920 x 1200)
Keyboard		104 keys
Mouse		touch pad mouse
Local Control	Keyboard/Mouse	USB 2.0
Terminal	DVI-D	24 pin DVI-D female connector
(Master)	VGA	HD-15 female connector
	USB 2.0	For USB peripheral device
	Audio	3.5mm stereo jack
Local Control	DVI-D	24 pin DVI-D female connector
Terminal (Slave 1)	VGA	HD-15 female connector
Local Control	DVI-D	24 pin DVI-D female connector
Terminal (Slave 2)	VGA	HD-15 female connector
Power supply		100-240V AC 50/60Hz via IEC Type power cord
Housing		Metal housing
Weight		18.5Kg
Dimension(W x H x D)		443 x 88 x 580 mm

## 1.6 Front View

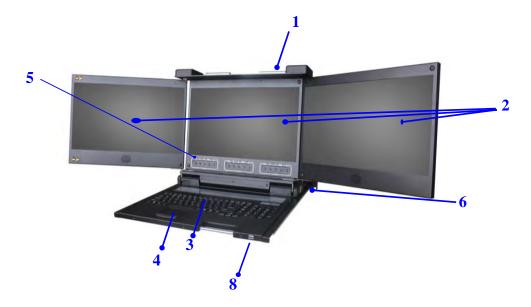

NO	Part	Function Description
1	Handle to adjust screen tilt; lock/release rail sliding	
2	LCD display	
3	Keyboard	
4	Touchpad	
5	LCD OSD button	LCD button to control Screen Display position and image setting.
6	Mounting bracket	Install into rack cabinet
7	Lock button	Auto lock / release when lcd pulled up and down
8	USB2.0 HUB port	


## 1.7 Rear View

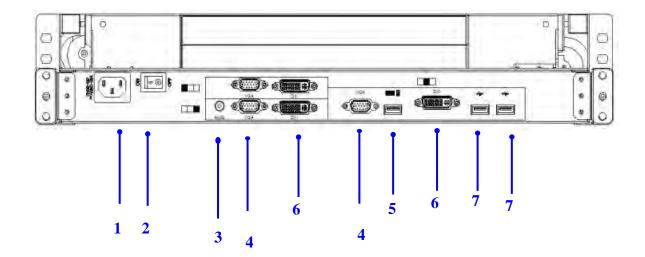


No	Component	Function Description	
1	AC Power port	Standard IEC Type AC Inlet	
2	Power Switch	Rock switch, turn on/off equipment main power.	
3	Audio port	For audio function	
4	VGA port	Connect to server or KVM.	
5	USB port	Connect to server or KVM.	
6	DVI port	Connect to server or KVM.	
7	USB 2.0	For USB peripheral device	

## 2 Installation


#### 2.1 Rack Installation

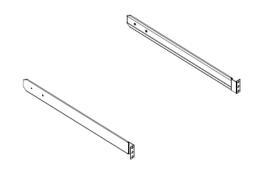

Front mounting bracket (L&R)

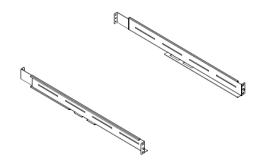


Rear mounting bracket (L&R)

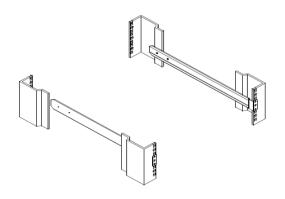


Step 1 Back View

■ Rear mounting bracket, screw M6 \*4pcs

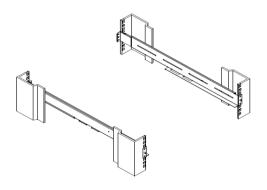


Step 2 Front View

■ Insert the left and right front mounting brackets into rear mounting bracket, screw M6 \* 4pcs

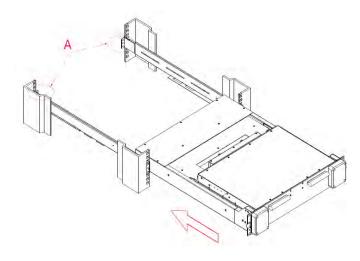

Step 3 Front View


- Slide KVM into mounting bracket
- Screw M4 \*4pcs at Point A

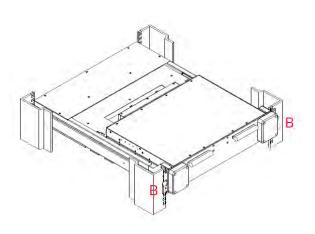

Step 4 Front View


■ Screw M4 \*2pcs at Point B

## 2.2 Operation

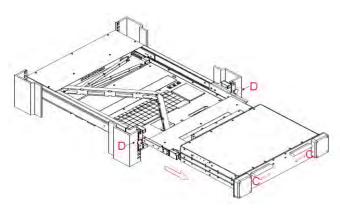


## Step 1

- Unlock handle C to release rail locker and slide out
- Use locker D to stable the rail

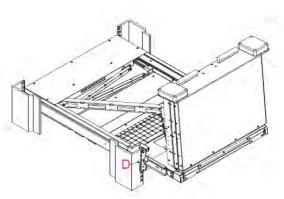


## Step 2

■ Lift up LCD panel

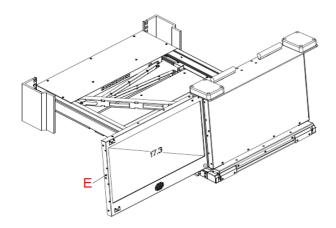


## Step 3

■ Hold Point E to open the left panel

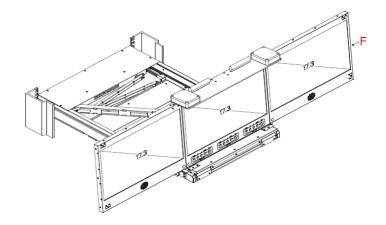


## Step 4

■ Hold Point F to open the right panel

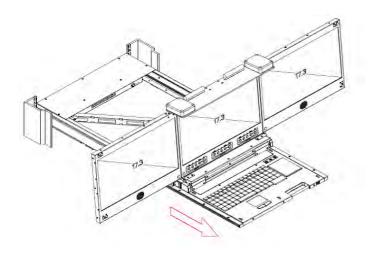

## Step 5

■ Slide out keyboard tray when needed

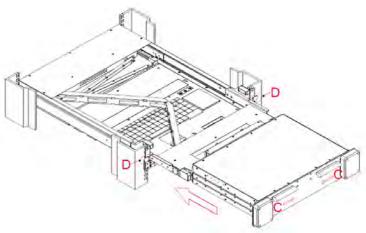

## Step 6 After operation


- Based on step 5 --- 4 --- 3 --- 2 to put away keyboard tray and LCD panels
- Unlock locker D
- Use handle C to lock into cabinet

#### 2.3 Standard Installation

Please follow the installation drawing and instructions below for standard installation:

- \* Please Shutdown the Power of the Equipment to be Connected
- \* Please Pay Attention to Earthing of Equipment

The standard installation is completed, and LCD KVM console can be powered on. Then power on connected hosts.

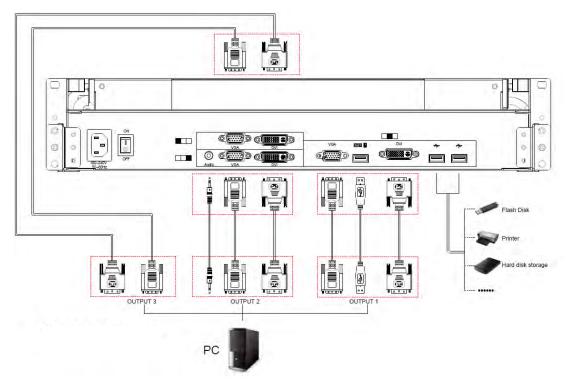

## **Demonstration of Different Display Mode**



## 2.4 LCD OSD Menu Setup

#### **OSD Control buttons**

LCD OSD can establish and setup LCD display. Setup instructions of four buttons are as follows:

Button	Functions
POWER	Turn on or off the LCD Display
MENU	Activate OSD menu, select a menu and press MENU key to confirm the
MENU	selection and enter the submenu.
•	Press this key to increase setting or scroll up the menu bar
•	Press this key to Decrease setting or scroll down the menu bar
AUTO	press the auto key to select video source

#### **OSD Control Operation**

#### Main Menu



#### 3 Certificates

#### **FCC**

This product has been tested and is proved to meet requirements of Grade B electronic devices and specifications of Section 15 of FCC certification. Please observe following two conditions in operation that:

- (1) The equipment will not generate any harmful interruption.
- (2) If the equipment is interrupted, it may cause unnecessary operations.

#### **CE**

This equipment complies with regulations of EN55022:CLASS B.

#### **RoHS**

The whole package including products, packaging materials and documents meet RoHS equipments.